

XBT23 REMOTE CONTROL



- Power supply: 9 V; (3 pcs CR2016 bat type).
- Working frequency: 433,92 MHz, static code.
- Current consumption (max): 25 mA
- Working environment: -10°C - 50°C
- 4 Buttons.

TRANSMITTER'S CODE SETTING

1.- Learning a button on transmitter for step by step operation:
Sortly press "LEARN" button on control board, "LEARN" LED light on, then press and hold the required button on transmitter till the "LEARN" LED flashes and goes out.

2.- Learning a button on transmitter for opening operation:
Sortly press "LEARN" button twice on control board, "LEARN" LED flashes twice, then press another button on transmitter till the "LEARN" LED flashes and goes out.

- **This way, more transmitters can be learned**

ERASING THE TRANSMITTER'S CODE

Erasing transmitter codes: Press "LEARN" button and hold on to make the "LEARN" LED light till go out. Now, all codes of transmitters which had been learnt are cleared.