


DSC NEO Power Series Configuration Manual

(HS2016/2032/2064/2128)

***NOTE: M2M advises that an experienced alarm installer program these panels as further programming is required to ensure proper performance.**

Full panel testing & signal confirmation must be completed by the installer.

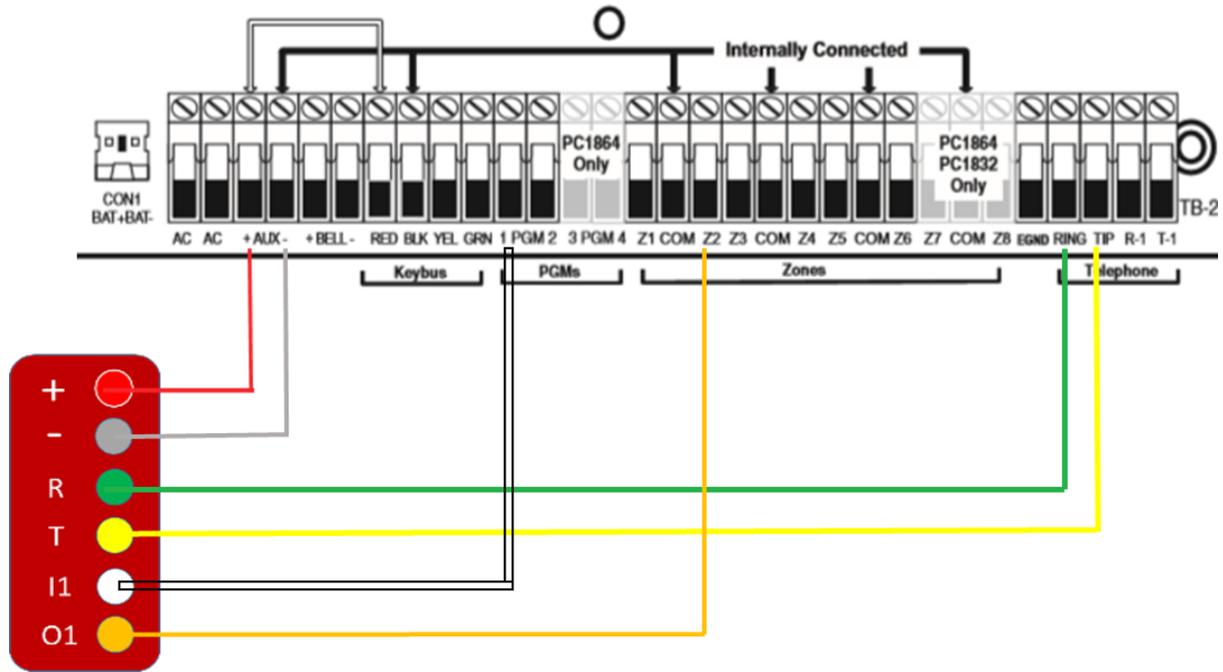

*IN1 and OUT1 – optional terminals for the remote arm/disarm feature

Wiring the MN01-4G to the Alarm Panel

Enable Contact ID reporting:

Keypad Display	Keypad entry	Action description
Select:	*8555	To enter Programming mode
Select:	301	To enter menu" First phone number"
Select: 001	001	To select first phone number
DFFFFFF (or previous number)	123456*6*#	Enter actual or non-existing number (any number will do, 123456 is example, press *6* to enter/exit hex mode in order to fill the rest with 'F's)
Select:	383	Enter Communication Options 4
Comm. Option 4:	2#	Toggle 2 to OFF, to set the programmable account code in 310 to 4 digits, # saves
Select:	310	To enter menu "System account code"
System account:	000	To enter submenu for the whole system (001, 002... for more partitions)
System account:	1234#	Enter 4-digit account number for CMS identification (1234# is an example)
Select:	311	To enter menu "Reporting"
Select:	001	To go to "Alarm restore options"

Toggle receiver#1	*#	Press * to select "Y" (yes) – "Alarm/Restore" events are reported to telephone number 1
Tamper restore:	002	To go to "Tamper/Tamper restore"
Toggle receiver#1	*#	Press * to select "Y" (yes) – "Tamper/Tamper restore" events are reported to telephone number 1
Opening/Closing	003	To go to "Open/Close" events
	*##	Press * to select "Y" (yes) – "Open/Close" events are reported to telephone number 1, # to save, # to exit to main menu
Select:	350	To enter "Communicator Alarm Format" options
Enter Data:	001	To select phone number 1
Enter Data:	03#	03 is for Contact ID, # to save (alternatively you can use <> to move in the menu)
Select:	380	Enter First Communication Options
Comms. Enabled:	1##	Toggle 1 to ON, 3 and 4 must be off (DTMF touch-tone dialing, DTMF dialing for all attempts), # to save

Program Keyswitch zone and output:

Keypad Display	Keypad entry	Action description
Select:	*85555	To enter Programming mode
Select:	001	Enter zone definition menu
Zone definitions	*	Enter Zone 1 definition
Zone 1	066	To choose Momentary Keyswitch for Zone 1
Momentary KSW	##	To exit to main menu
Select:	013	Enter First System Options (to configure Normally Closed Zones)
Toggle 1	*	Press the * or toggle buttons <> until 1 is ON (all zones are wired as normally closed circuits with returns to COM terminal)
Toggle Option 1	##	Press ## to exit to main menu
Select:	009	Enter I/O Programming menu
PGM 1	001	To enter PGM 1 subsection
PGM 1	115	To program the output to report Armed/Disarmed status
PGM 1	##	Press ## to exit to main menu